


IVISIBILITY OPERATOR USAGE GUIDE

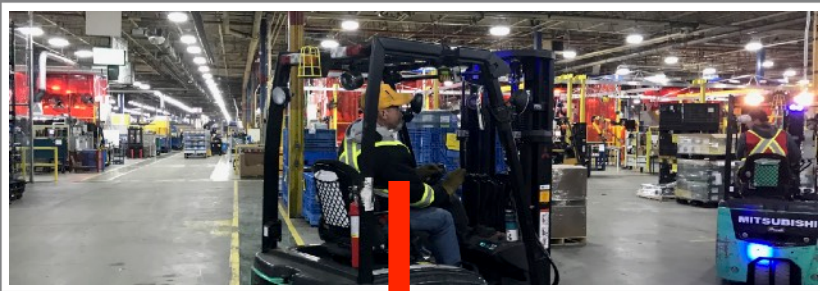

1. With company KPI factor being exceeded the LCD display will automatically show “**DOWNTIME UNIDENTIFIED**” time which will be recorded.
2. Audio / Visual alert will be activated on LCD display for five seconds providing the operator opportunity to identify justified operational downtime.
 - Use < > arrow key to access the menu to input justified downtime task.
 - Select applicable operational downtime task and press “**Enter key**” ↵.
 - Downtime task will be recorded.
3. All operational downtime events recording will be cancelled automatically once productive operational cycle is initiated.